

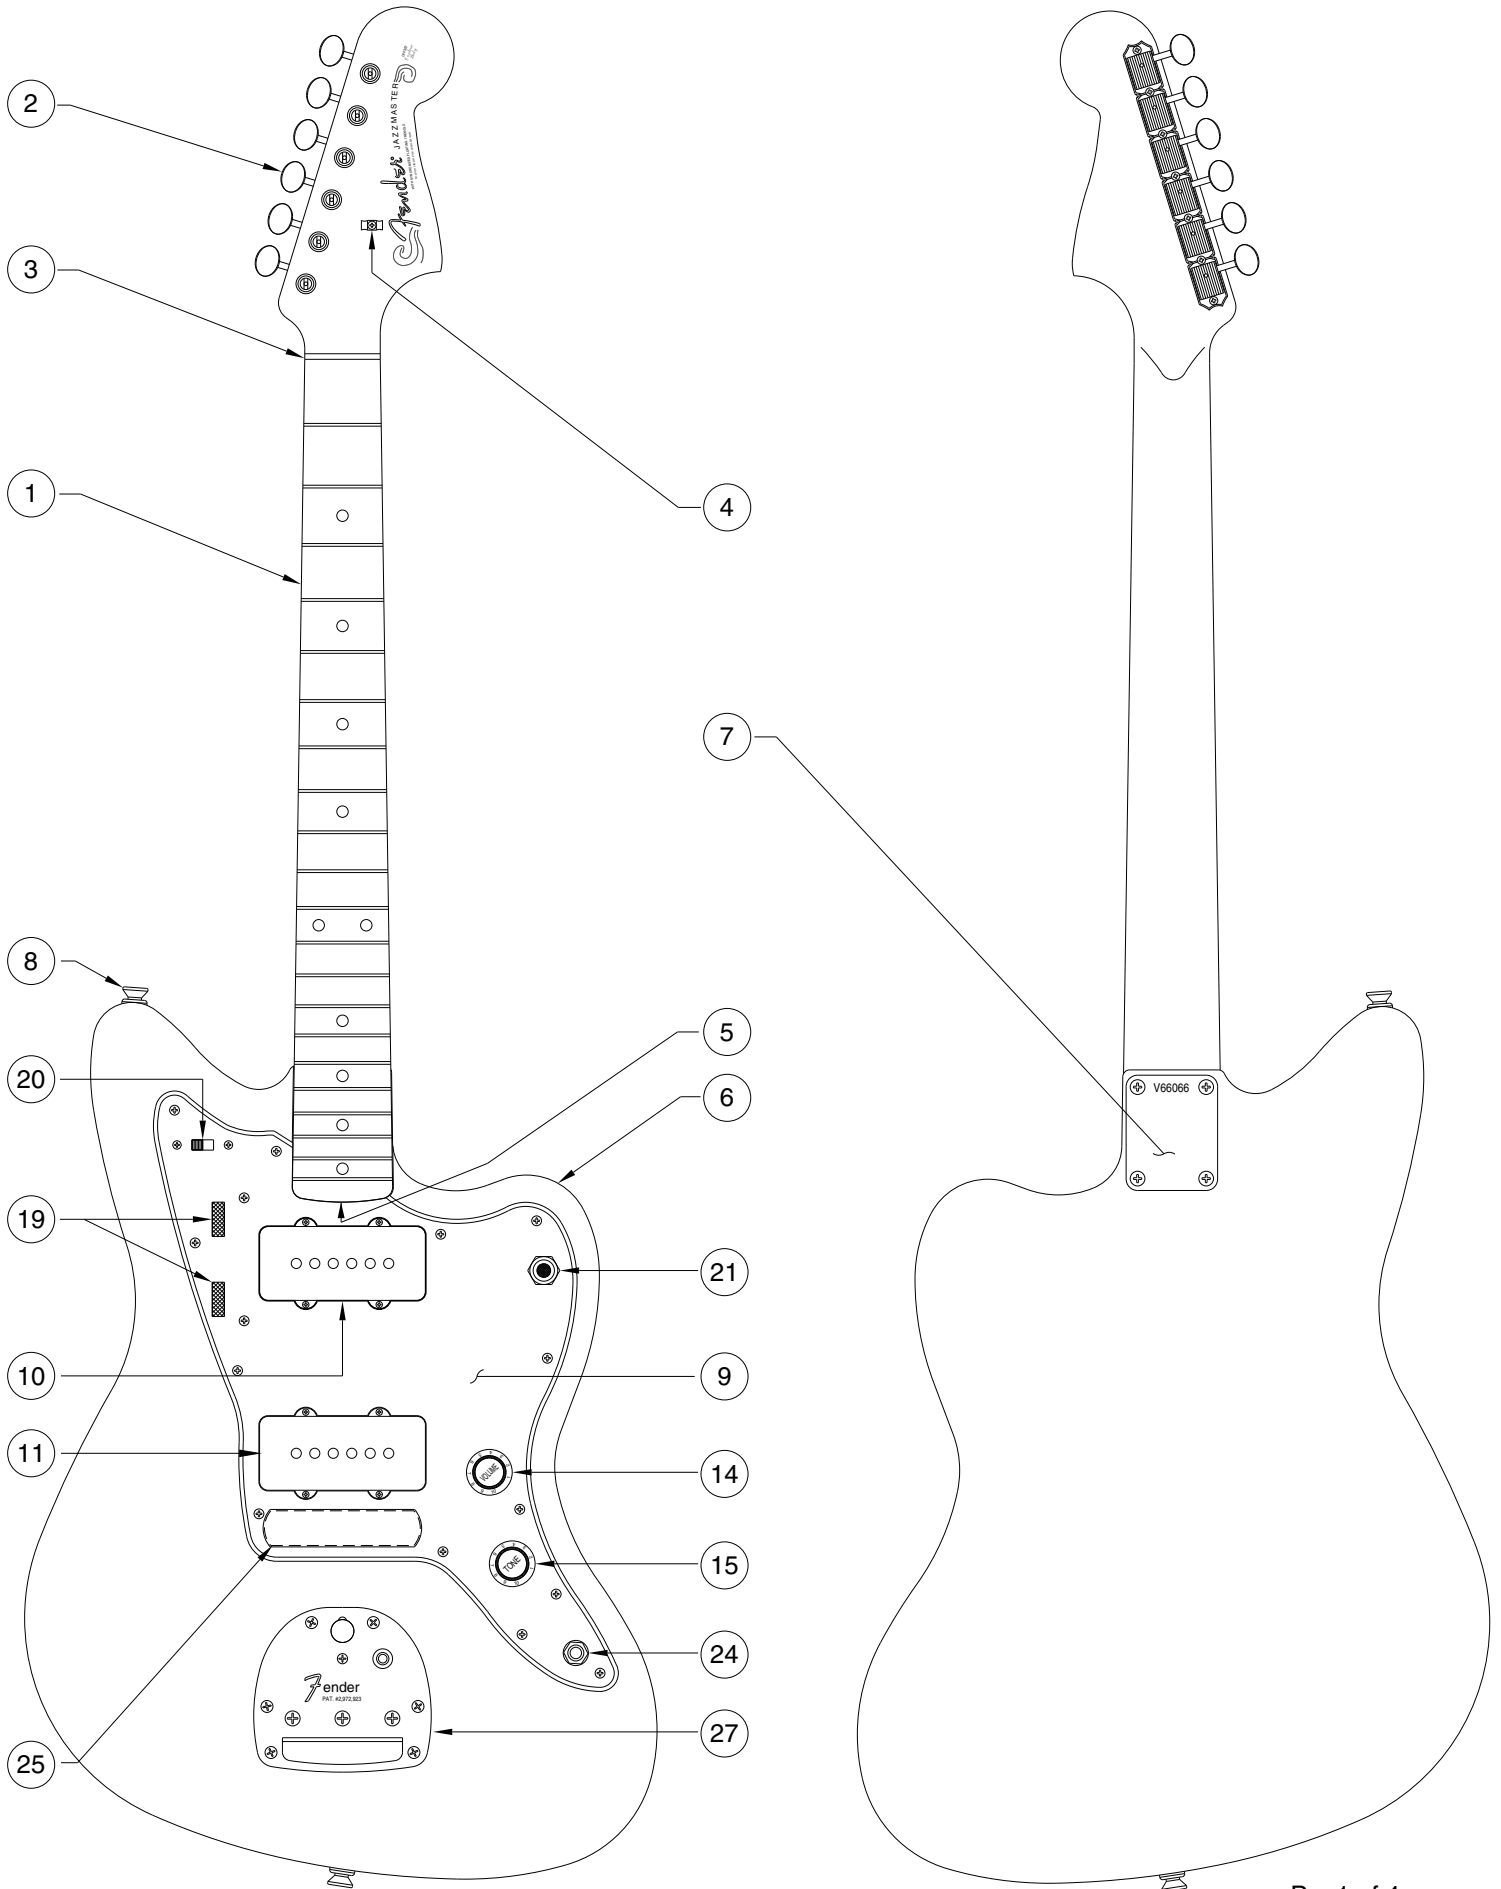
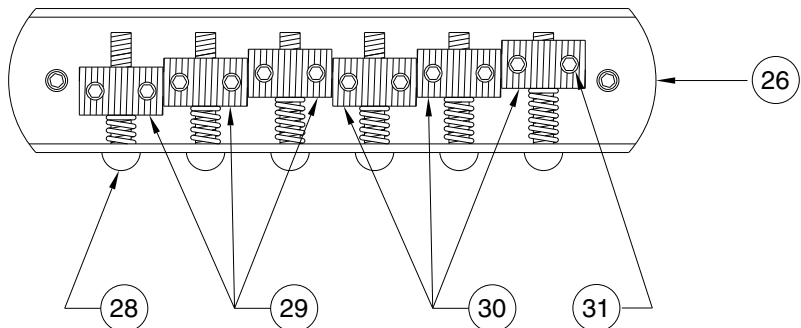


'62 AMERICAN VINTAGE JAZZMASTER 0100800

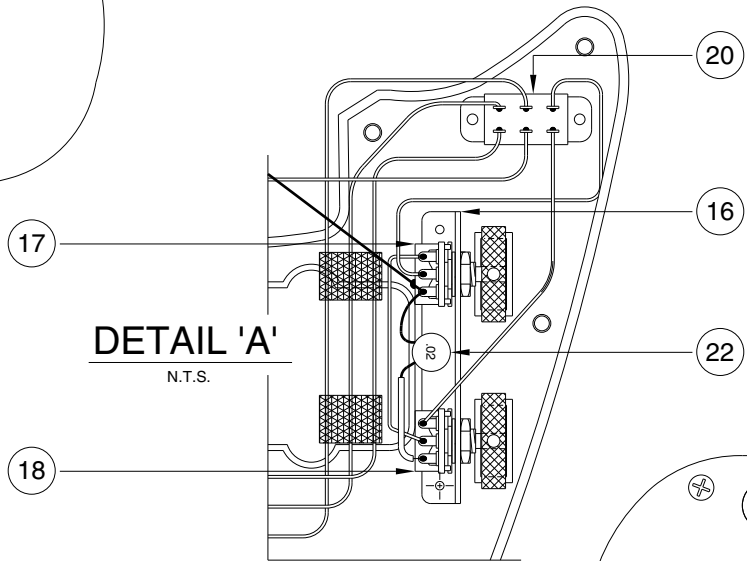


'62 AMERICAN VINTAGE JAZZMASTER 0100800

PICKGUARD ASSEMBLY

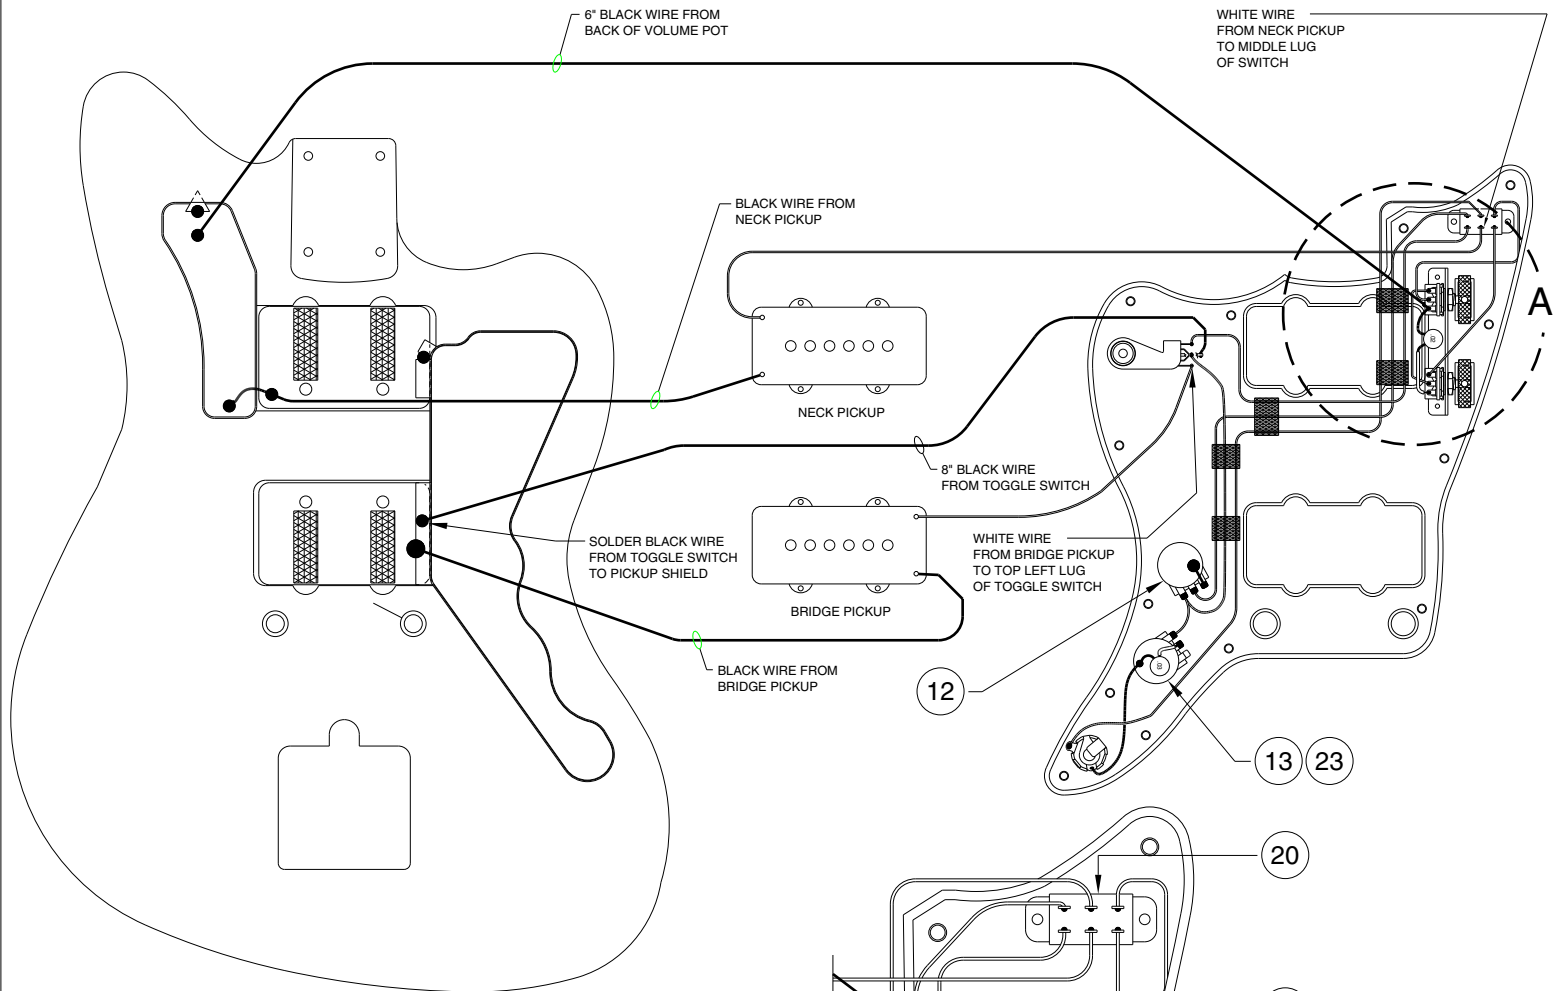

BRIDGE ASSEMBLY  
WITHOUT COVER

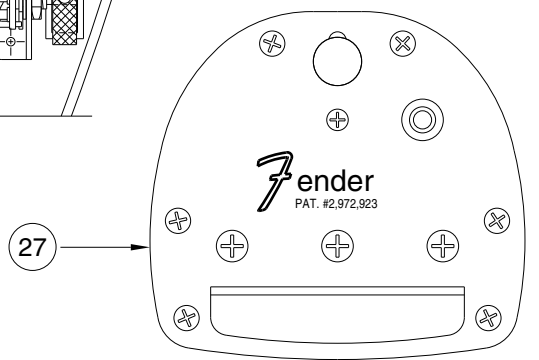

TREMOLO ASSEMBLY


## '62 AMERICAN VINTAGE JAZZMASTER 0100800

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0054477000	Neck, Jazzmaster, R/W	31	0040196000	Height Adjustment Screw, (1&6)
2	0019309000	Tuning Key, (1) Set		0016089000	Height Adjustment Screw, (2-5)
	0011357000	Mounting Screw		0018531000	Adjusting Wrench, Saddle Height
	0019312000	Bushing			
3	0083675000	Bone Nut			
4	0010389000	String Retainer			
	0011358000	Mounting Screw			
	0020423000	Spacer			
5	0012252000	Truss Rod Adjustment Nut			
6	0054436xxx	Body, '62 Vintage Jazzmaster, Solid Paint			
7	0019647000	Neck Mounting Plate			
	0015636000	Mounting Screw			
8	0012344000	Strap Button			
	0016188000	Mounting Screw			
9	0054450000	Pickguard, '62 Vintage Jazzmaster, Brown Shell			
	0054451000	Pickguard, '62 Vintage Jazzmaster, Mint Green			
	0015578000	Mounting Screw			
10	0054444000	Pickup, Neck, '62 Vintage Jazzmaster			
11	0054443000	Pickup, Bridge, '62 Vintage Jazzmaster			
	0016295000	Mounting Screw			
12	0054453000	Control, 1Meg, Linear			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
13	0054032000	Control, 1 Meg, Audio			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
14	0056145000	Knob, Volume, White			
15	0056144000	Knob, Tone, White			
16	0054454000	Bracket, Control Mounting			
	0015719000	Mounting Screw			
17	0054457000	Control, 1 Meg, W/Hex Nut			
18	0054458000	Control, 50K, W/Hex Nut			
	0016451000	Lock Washer, Intl			
19	0054455000	Knob, Black, Pre-Set Control (2)			
20	0017079000	Switch, Slide			
	0015719000	Mounting Screw			
21	0053694000	Switch Assembly, Lever 3-Position			
22	0054459000	Capacitor, .02uf			
23	0015545000	Capacitor, .03uf			
24	0021956000	Output Jack			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
25	0054460000	Bridge Assembly, '62 Vintage Jazzmaster			
	0054465000	Cover, Bridge			
26	0054519000	Bridge Channel/Post Assembly			
	0056157000	Mounting Screw			
27	0054466000	Tremolo Assembly			
	0015610000	Mounting Screw			
28	0015693000	Intonation Screw, (6)			
29	0054463000	Bridge Section, (4-6)			
	0056139000	Intonation Spring - #4			
	0056138000	Intonation Spring - #5			
	0019281000	Intonation Spring - #6			
30	0054464000	Bridge Section, (1-3)			
	0056139000	Intonation Spring - #1			
	0056138000	Intonation Spring - #2			
	0019281000	Intonation Spring - #3			

Body Part Number	
0054436500	3 Color Sunburst
0054436505	Olympic White
0054436506	Black
0054436509	Candy Apple Red
0054436540	Fiesta Red
0054436546	Sherwood Metallic

# '62 AMERICAN VINTAGE JAZZMASTER 0100800

## SWITCH & CONTROL FUNCTION

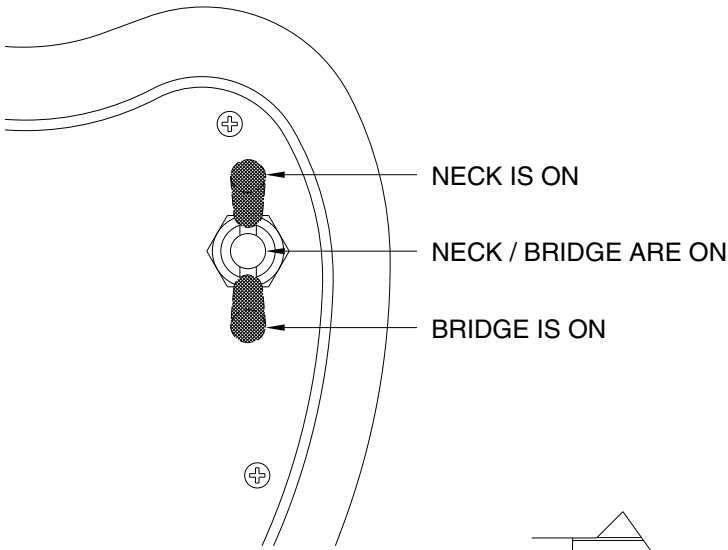

**DETAIL**  
**3 WAY SWITCH**

3 WAY SWITCH POSITION			
● 3 ○	○ 2 ●	○ 1 ●	← 3 WAY SWITCH POSITION
■	■	□	← NECK PICKUP
□	■	■	← BRIDGE PICKUP
■	PICKUP IS ON		□ PICKUP IS OFF

NECK PICKUP ON

BRIDGE PICKUP ON

NECK PICKUP VOL

NECK PICKUP TONE

NECK PICKUP

BRIDGE PICKUP

SEE 3 WAY SWITCH &  
DETAIL DIAGRAM



**MASTER VOLUME**  
WHEN NECK / BRIDGE  
SWITCH IS IN BRIDGE  
POSITION. NON FUNC-  
TIONAL IN NECK  
POSITION.

**MASTER TONE**  
WHEN NECK / BRIDGE  
SWITCH IS IN BRIDGE  
POSITION. NON FUNC-  
TIONAL IN NECK  
POSITION.